

Educational Technology Support Services Classroom Training Manual

ECHO HDMI Classrooms
Fall 2013

Accessing the Classroom Control Panel

- Log on to the classroom computer to access the control screen below



Turning the Projector On

- Click the “Power On” button to start projector
- Projector will beep, screen image appears in ~20 seconds



Note: The PC is the default video source

Turning the Projector Off

- When class is over please turn off the projector by clicking the “Power Off” button




Using the Document Camera & Laptop

- Click on the “Doc Cam/Laptop” button to select device
- Use the INT/EXT button on the Doc Cam to switch between the Doc Cam and Laptop




Using the HDMI Interface

- Click on the “HDMI” button to utilize a high definition video source

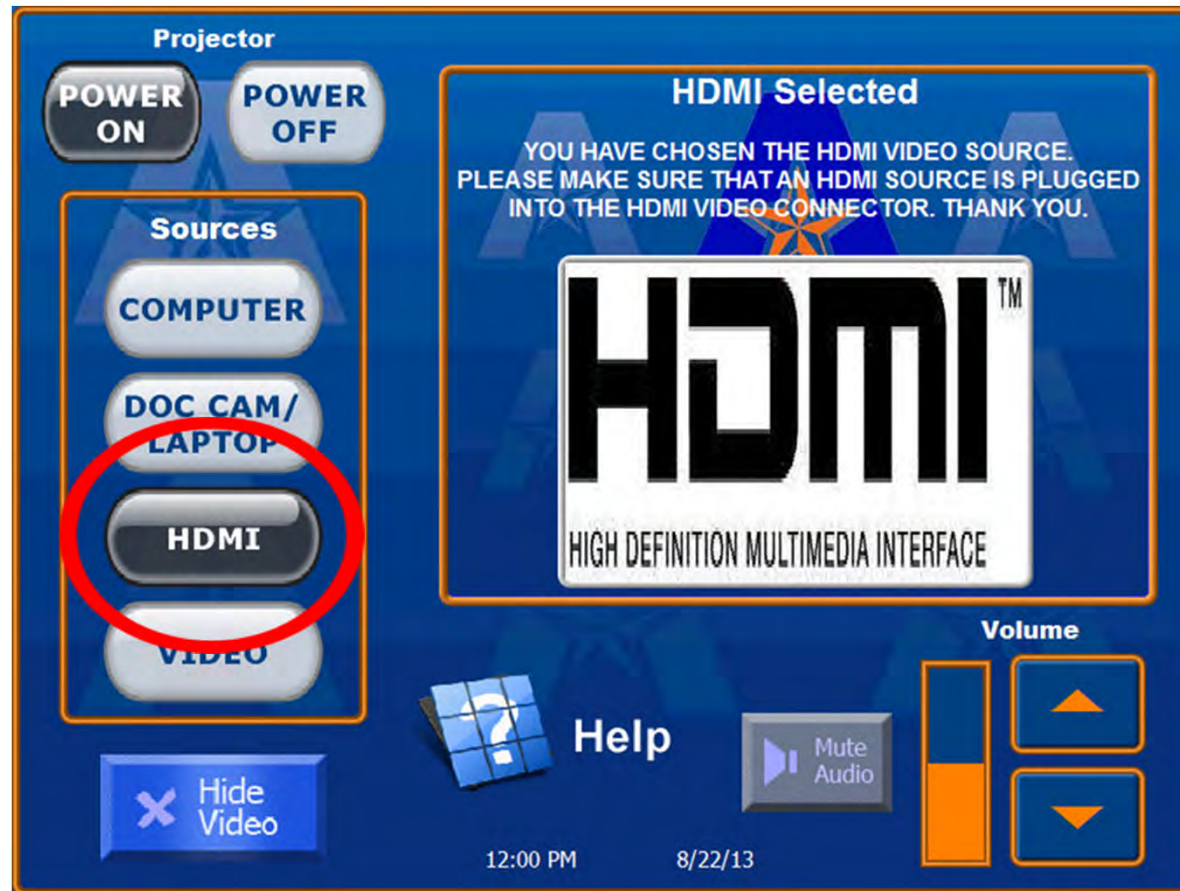


Playing Videos

- Click on the “Video” button to play a video

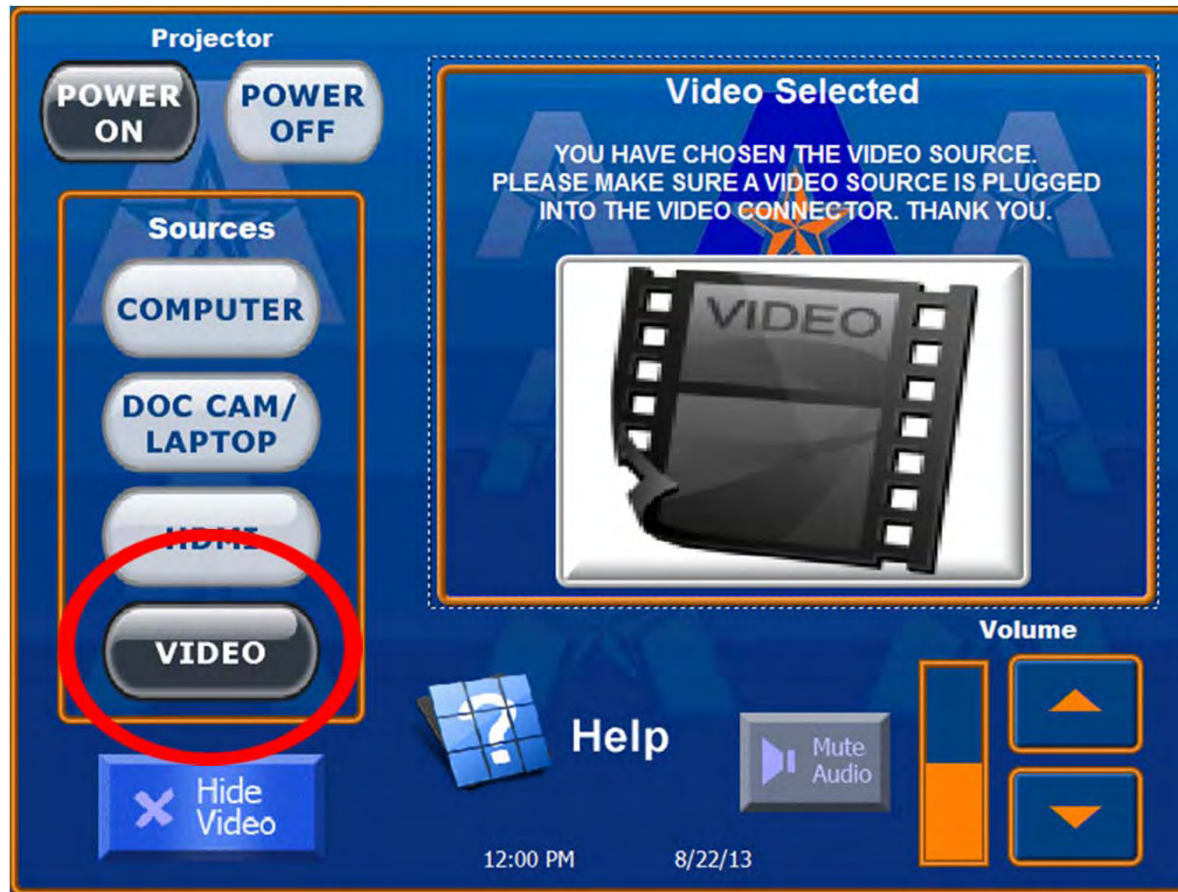

Audio Controls

- Click the appropriate button to achieve your desired audio level

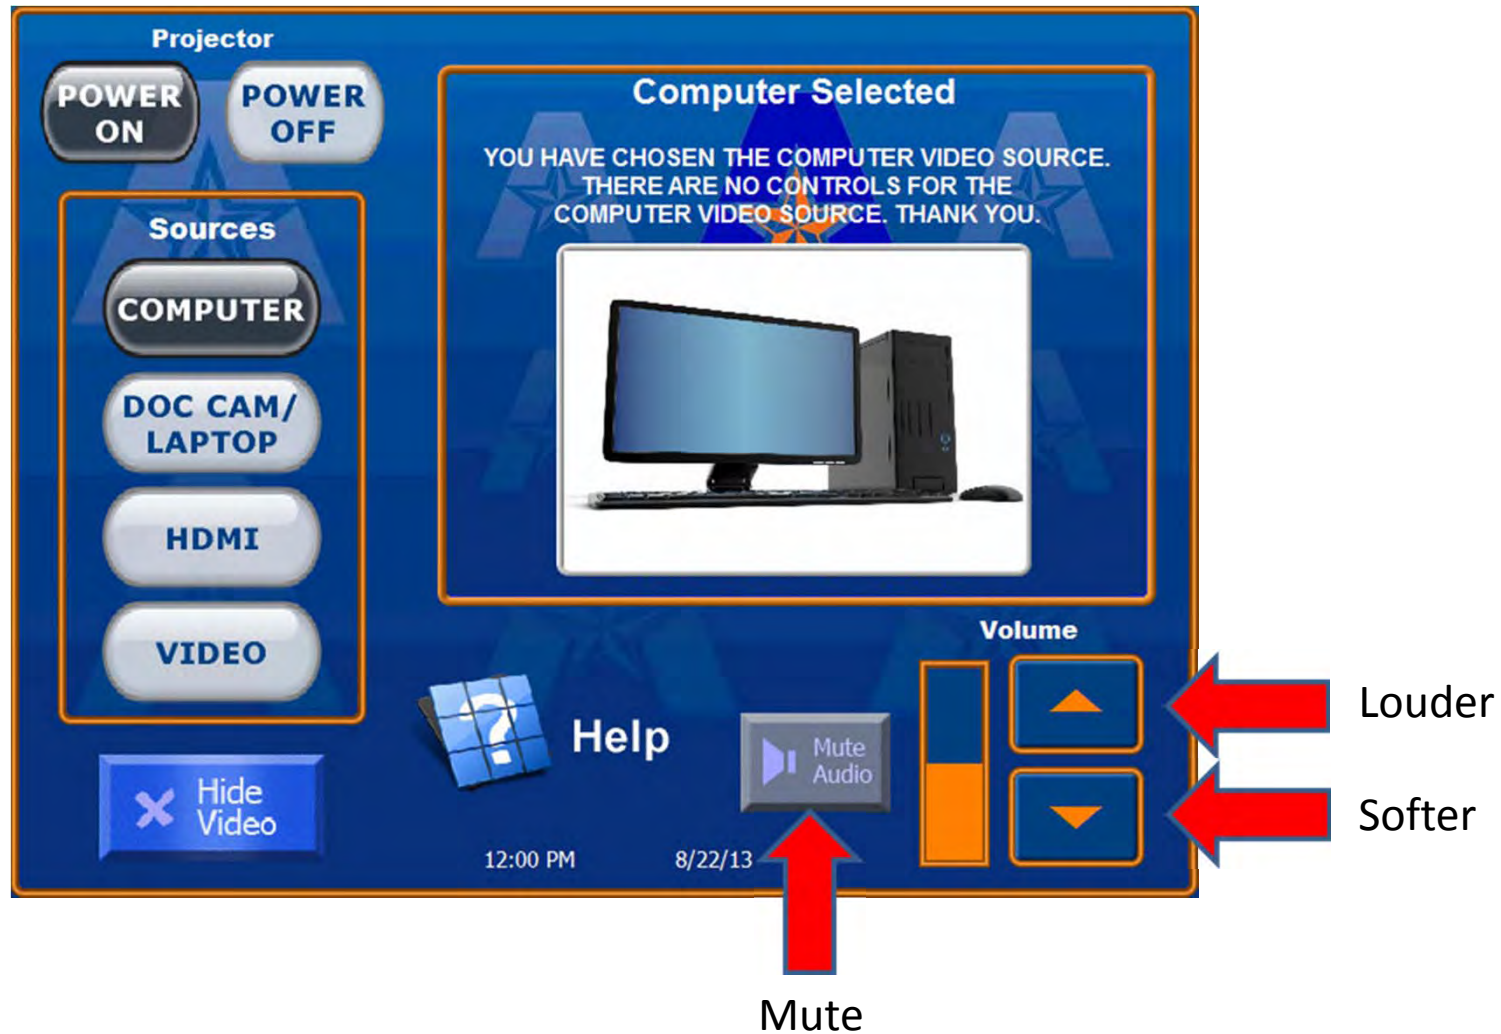

Hiding Video Feed

- To hide a video in favor of another source click the “Hide Video” button
- Click the button again to return to the video feed



Technical & Emergency Assistance

- If you need technical or emergency assistance during class click on the “Help” button
- Please Note: the video will automatically mute when you request “Help”



Technical & Emergency Assistance

For technical assistance, please contact
Educational Technology Support Services
at
classroomsupport@uta.edu
or
817-272-1449

Thank you!



To Contact
UTA Police >>>>



Emergency Assistance

If you have an emergency,
please press the button
that best describes your
situation.

A police officer will immediately
be dispatched to your location.



Please dispatch
a police officer.
Medical Emergency



Please dispatch
a police officer.
Non-Threatening



Please dispatch
a police officer -
Threatening

