Educational Technology Support Services Classroom Training Manual

Standard Classrooms Fall 2013

Accessing the Classroom Control Panel

Log on to the classroom computer to access the control screen below




Turning the Projector On

- Click the "Power On" button to start projector
- Projector will beep, screen image appears in ~20 seconds




Turning the Projector Off

When class is over please turn off the projector by clicking the "Power Off" button

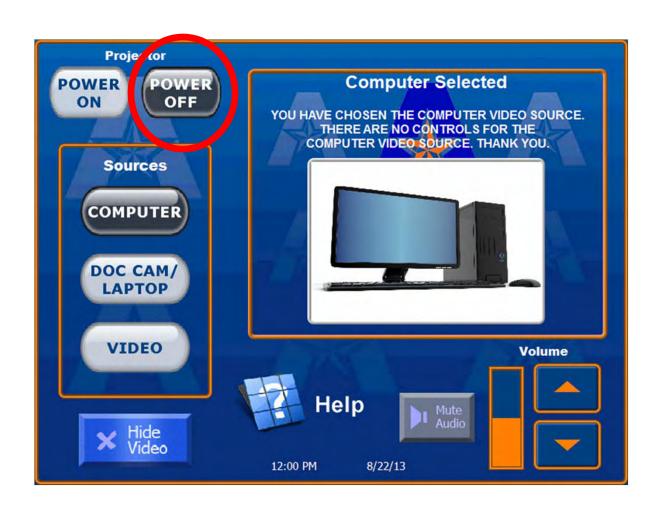


Using the Document Camera & Laptop

- Click on the "Doc Cam/Laptop" button to select device
- Use the INT/EXT button on the Doc Cam to switch between the Doc Cam and Laptop

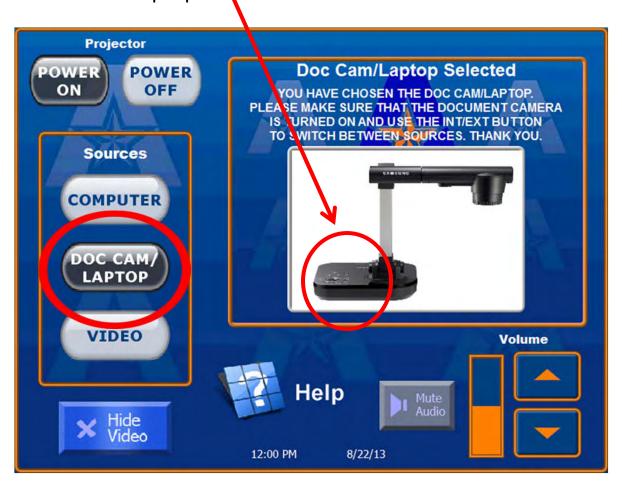


Playing Videos

Click on the "Video" button to play a video

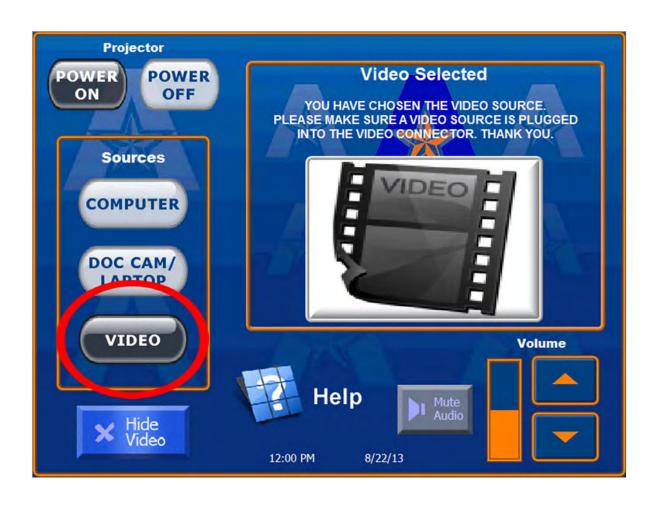

Audio Controls

Click the appropriate button to achieve your desired audio level

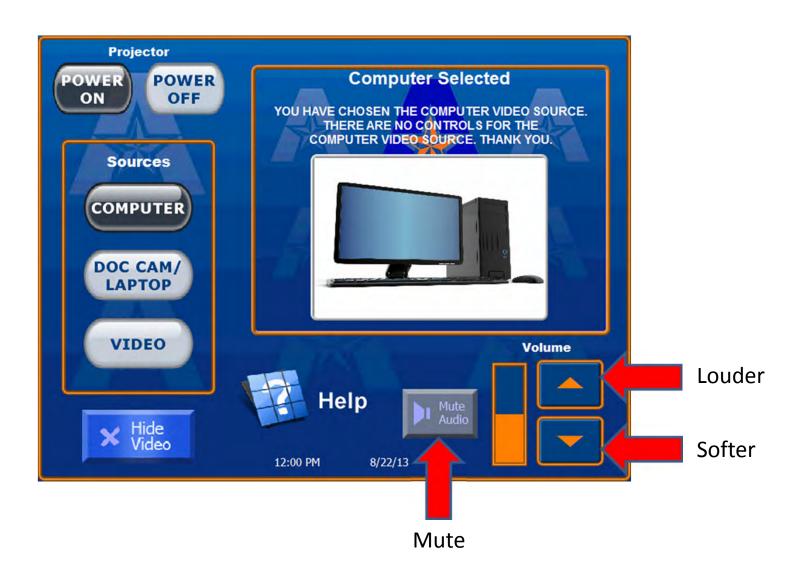

Hiding Video Feed

- To hide video in favor of another source click the "Hide Video" button
- Click the button again to return to the video feed



Technical & Emergency Assistance

- If you need technical or emergency assistance during class click on the "Help" button
- Please Note: the video will automatically mute when you request "Help"



Technical & Emergency Assistance



Emergency Assistance

